



Update Software

BE-Flash

GB

Operating Instructions



TRIAX - your ultimate connection

- 1 Software License Agreement 3**
 - 1.0 Software License Agreement 3
 - 1.1 Definitions 3
 - 1.2 Software License..... 3
 - 1.3 Obligations and Restrictions..... 4
 - 1.4 Transfer 4
 - 1.5 Intellectual Property Ownership, Reservation of Rights 4
 - 1.6 No Warranty. 4
 - 1.7 Limitation of Liability..... 4
 - 1.8 General Provisions..... 5
 - 1.9 Compliance with Licenses. 5
- 2 General information 6**
 - 2.1 Meaning of the used symbols 6
 - 2.2 Description 6
- 3 Firmware Update using the BE-Flash Software 7**
 - 3.1 PC System Requirements..... 7
 - 3.2 Preparation..... 7
 - 3.3 Update Procedure..... 8

1 SOFTWARE LICENSE AGREEMENT

This document includes warranty information and a license agreement governing the use of **TRIAX A/S** software.

1.0 SOFTWARE LICENSE AGREEMENT

By using, copying or distributing the **TRIAX** software, you accept all the terms and conditions of this agreement, including, in particular, the provisions on:

- Use contained in section 1.2;
- Transferability in section 1.4;
- Warranty in section 1.6 and liability in section 1.7.

Upon acceptance, this agreement is enforceable against you and any entity that obtained the software and on whose behalf it is used.

If you do not agree, do not use the software.

TRIAX permits you to use the software only in accordance with the terms of this agreement.

1.1 DEFINITIONS

"**TRIAX**" means **TRIAX A/S, Bjørnkärvej 3, 8783 Hornsyld, Dänemark**.

"**Computer**" means a virtual or physical personal electronic device that accepts information in digital or similar form and manipulates it for a specific result based on a sequence of instructions.

"**Software**" means all of the contents of the files (delivered electronically or on physical media), or CD or other media with which this agreement is provided, which may include **TRIAX** or third party computer information or software, including **TRIAX "BE-Flash"**; related explanatory written materials or files ("Documentation"); and upgrades, modified versions, updates, additions, and copies of the foregoing, provided to you by **TRIAX** at any time (collectively, "Updates").

"**Use**" means to access, install, download, copy, or otherwise benefit from using the functionality of the Software.

1.2 SOFTWARE LICENSE

If you obtained the Software from **TRIAX** or one of its authorized licensees, and subject to your compliance with the terms of this agreement, including the restrictions in Section 1.3, **TRIAX** grants to you a non-exclusive license to use the Software in the manner and for the purposes described in the Documentation as follows:

1.2.1 General Use

You may install and use one copy of the Software on your compatible Computer. See Section 1.3 for important restrictions on the use of the Software.

1.2.2 Server Use

This agreement does not permit you to install or use the software on a computer file server.

1.2.3 Distribution

This license does not grant you the right to sublicense or distribute the Software.

1.2.4 Backup Copy

You may make one backup copy of the Software, provided your backup copy is not installed or used. You may not transfer the rights to a backup copy unless you transfer all rights in the Software as provided under Section 1.4.

1.3 OBLIGATIONS AND RESTRICTIONS

1.3.1 Notices

Any copy of the Software that you make must contain the same copyright and other proprietary notices that appear on or in the Software.

1.3.2 No Modification or Reverse Engineering

You may not modify, adapt, translate or create derivative works based upon the Software. You will not reverse engineer, decompile, disassemble or otherwise attempt to discover the source code of the Software except to the extent you may be expressly permitted to reverse engineer or decompile under applicable law.

1.4 TRANSFER

You may not rent, lease, sublicense, assign or transfer your rights in the Software, or authorize all or any portion of the Software to be copied onto another user's Computer except as may be expressly permitted by this agreement. You may, however, transfer all your rights to use the Software to another person or legal entity provided that:

- you also transfer this agreement, and the Software and all other software or hardware bundled or pre-installed with the Software, including all copies, updates and prior versions, to such person or entity,
- you retain no copies, including backups and copies stored on a Computer, and
- the receiving party accepts the terms and conditions of this agreement and any other terms and conditions upon which you obtained a valid license to the Software. Notwithstanding the foregoing, you may not transfer education, pre-release, or not for resale copies of the Software.

1.5 INTELLECTUAL PROPERTY OWNERSHIP, RESERVATION OF RIGHTS

The Software and any authorized copies that you make are the intellectual property of **TRIAX A/S**. The structure, organization and code of the Software are the valuable trade secrets and confidential information of **TRIAX A/S**. Except as expressly stated herein, this agreement does not grant you any intellectual property rights in the Software and all rights not expressly granted are reserved by **TRIAX**.

1.6 NO WARRANTY.

The software is being delivered to you "as is" and with all faults. **TRIAX** and its suppliers do not and cannot warrant the performance or results you may obtain by using the software, certificate authority services or other third party offerings. Except to the extent any warranty, condition, representation or term cannot or may not be excluded or limited by law applicable to you in your jurisdiction, **TRIAX** and its suppliers make no warranties conditions, representations, or terms (express or implied whether by statute, common law, custom, usage or otherwise) as to any matter including without limitation noninfringement of third party rights, merchantability, integration, satisfactory quality, or fitness for any particular purpose. The provisions of section 1.6 and section 1.7 shall survive the termination of this agreement, howsoever caused, but this shall not imply or create any continued right to use the software after termination of this agreement.

1.7 LIMITATION OF LIABILITY.

1.7.1 In no event will **TRIAX** or its suppliers be liable to you for any damages, claims or costs whatsoever including any consequential, indirect, incidental damages, or any lost profits or lost savings, even if an **TRIAX** representative has been advised of the possibility of such loss, damages, or claims. The foregoing limitations and exclusions apply to the extent permitted by applicable law in your jurisdiction. **TRIAX'** aggregate liability and that of its suppliers under or in connection with this agreement shall be limited to the amount paid for the software, if any. Nothing contained in this agreement limits **TRIAX'** liability to you in the event of death or per-

sonal injury resulting from **TRIAx**' negligence or for the tort of deceit (fraud). **TRIAx** is acting on behalf of its suppliers and Certificate Authorities for the purpose of disclaiming, excluding and/or limiting obligations, warranties and liability as provided in this agreement, but in no other respects and for no other purpose.

1.7.2 Limitation of Liability for Users Residing in Germany and Austria

1.7.2.1 If you obtained the Software in Germany or Austria, and you usually reside in such country, then Section 1.7.1 does not apply. Instead, subject to the provisions in Section 1.7.2.2, **TRIAx**' statutory liability for damages shall be limited as follows:

- **TRIAx** shall be liable only up to the amount of damages as typically foreseeable at the time of entering into the license agreement in respect of damages caused by a slightly negligent breach of a material contractual obligation and
- **TRIAx** shall not be liable for damages caused by a slightly negligent breach of a non-material contractual obligation.

1.7.2.2 The aforesaid limitation of liability shall not apply to any mandatory statutory liability, in particular, to liability under the German Product Liability Act, liability for assuming a specific guarantee or liability for culpably caused personal injuries.

1.7.2.3 You are required to take all reasonable measures to avoid and reduce damages, in particular to make back-up copies of the Software and your computer data subject to the provisions of this agreement.

1.8 GENERAL PROVISIONS.

If any part of this agreement is found void and unenforceable, it will not affect the validity of the balance of this agreement, which shall remain valid and enforceable according to its terms. This agreement shall not prejudice the statutory rights of any party dealing as a consumer. This agreement may only be modified by a writing signed by an authorized officer of **TRIAx**. Updates may be licensed to you by **TRIAx** with additional or different terms. This is the entire agreement between **TRIAx** and you relating to the Software and it supersedes any prior representations, discussions, undertakings, communications or advertising relating to the Software.

1.9 COMPLIANCE WITH LICENSES.

If you are a business or organization, you agree that upon request from **TRIAx** or **TRIAx**' authorized representative, you will, within thirty (30) days, fully document and certify that use of any and all Software at the time of the request is in conformity with your valid licenses from **TRIAx**.

2 GENERAL INFORMATION

2.1 MEANING OF THE USED SYMBOLS



Important note



General note




Performing works

—> The shown illustrations of menus are partly dependent on the used operating system and its settings.
Variations are possible.

2.2 DESCRIPTION

The BE-Flash software allows to update the firmware of devices (head-end stations and cassettes) of the head-end systems CSE 3300 and CSE 2800.

The update PC is to connect with a 1:1 RS-232 cable locally via a serial RS-232 interface to the device to be updated.

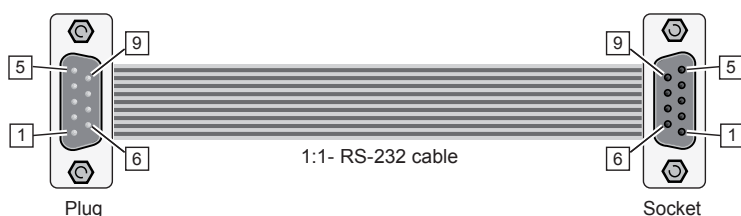

—> For PCs with USB connector (without serial interface), we recommend the DeLOCK "USB 2.0 to Serial adapter" (Product No. 61460).

Using a suitable management unit a remote controlled update of head-end stations and current cassettes of the head-end system 3300 is possible.



Trying to do an update using a wrong firmware results in an error message and possibly to a destruction of the cassette/module.

3 FIRMWARE UPDATE USING THE BE-FLASH SOFTWARE

3.1 PC SYSTEM REQUIREMENTS

System requirements for the BE-Flash software:

- Windows 95*/98*/ME/2000/XP/Vista/7/8 (*from Internet Explorer 5 on),
- at least 32 MB RAM,
- LAN interface (RJ 45 socket, for remote update via Ethernet),
- serial interface (COM interface, RS-232 Sub D, for in situ operation).

—> For PCs with USB connector (without serial interface), we recommend the DeLOCK "USB 2.0 to Serial adapter" (Product No. 61460).

- Internet access for downloads and remote update via Ethernet.

3.2 PREPARATION

- Unzip the new firmware into a folder on your PC (you will find current firmware at "www.triax.com").

—> To unzip click on the file using the right button of the mouse and select "extract all..." in the context menu.

For further information about the basics for operating your PC contact your system administrator.

—> The BE-Flash software (BEflash.exe) is contained in the ZIP file of the new firmware (you will find it also on the CD attached to the cassette/head-end station).

- Connect your PC via a "RS-232 Sub D cable" or a commercially available "USB/RS-232 adapter" to the RS-232 socket of the corresponding cassette/head-end station/management unit.

 
—> For update/remote update via a management unit additionally observe its assembling instruction.

—> **Note for cassettes of the head-end system CSE 3300 about the update via a direct connection (RS-232 interface):**

The cable must always be connected to the unit to be updated. The firmware of a cassette can not be updated via the control unit!


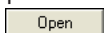
3.3 UPDATE PROCEDURE


- Start the update software **BEflash.exe**.

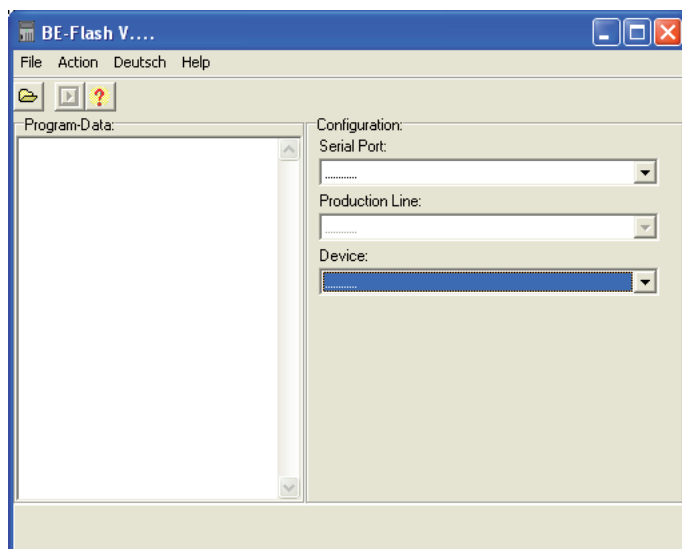


- Select the corresponding connection (COM 1...COM 9/Ethernet) in the pull-down menu **Serial Port:** of section "Configuration".

- > You can find the current COM port of an used USB/RS-232 adapter via the Windows system control.
- > **Only COM 1...COM 9 is supported by BE-Flash.**

 
- Select the file unzipped before in the "Open menu" (via menu item **File > Open...** or button ) and click to button .

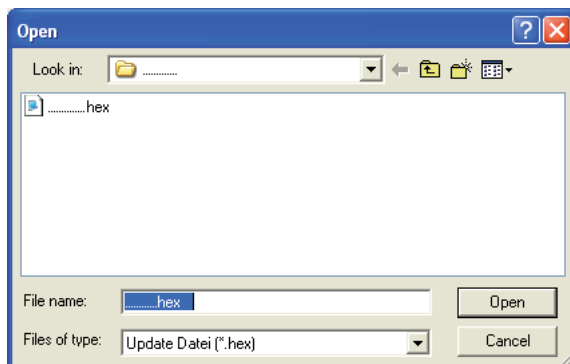


 
—> At recent devices and current firmware versions the device will be detected, the pull-down menus **Production Line** and **Device** are hidden.

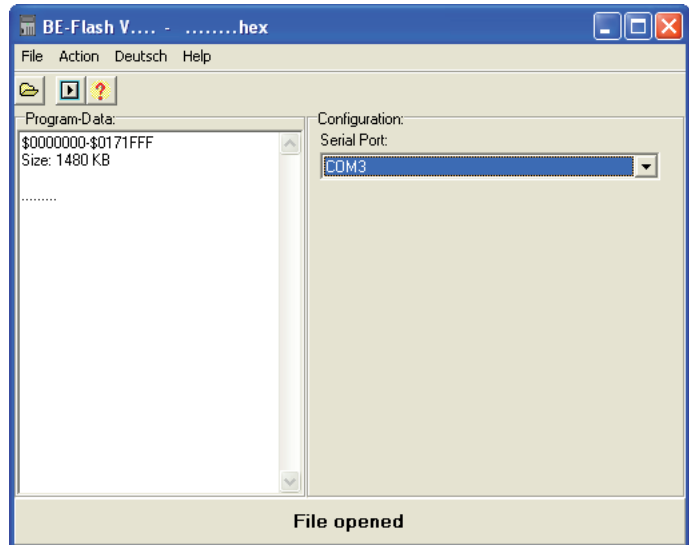

  - At older devices select "Triax" in the pull-down menu **Product Line** and the type of the device to be updated in the pull-down menu **Device**.

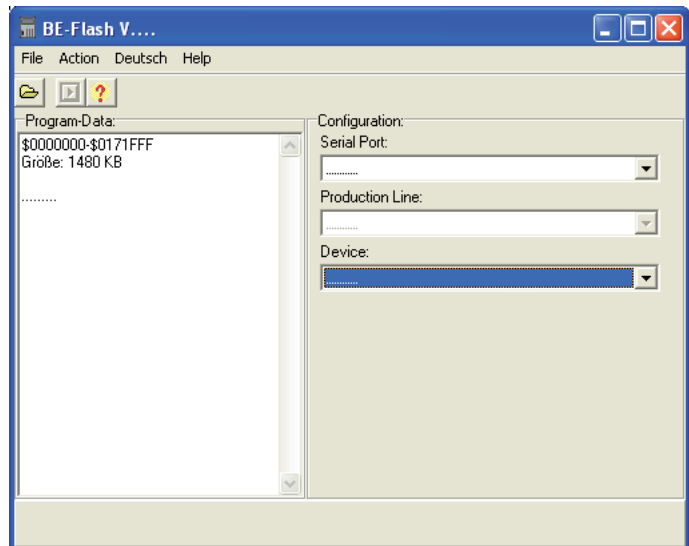


- > At direct connection via the COM interface to devices of the head-end system CSE 3300 **now** it is possible to recall its firmware indexes using button  (displayed in the lower part of the menu).
- > For update/remote update via Ethernet select **Ethernet** in section "Configuration > Serial Port" instead of a COM port.

- Click at button  or select menu item **Action > Program** to start the update procedure.


Additional settings for a connection via Ethernet:

- > For updates/remote updates via Ethernet a menu to enter the IP address and port is displayed.




The dialog box titled "Select IP-Address" has a blue title bar with a close button. It contains a label "IP-Port [Information]" above a text field with the value "10.6.11.20:60003" and a dropdown arrow. Below this is a label "Password:" followed by an empty text field. At the bottom are two buttons: "OK" with a green checkmark icon and "Abbruch" with a red X icon.

- Enter the IP address and (seperated by a colon) the port via the management unit can be connected: e.g. **10.6.11.20:60003**
- If a password for remote access of the management unit was assigned, enter it.
- Start the connection establishment with button "OK".
- > Devices suitable for the software are displayed:
e.g.: **01** (station)/**02** (cassette) **TMP16** (current software version 16)

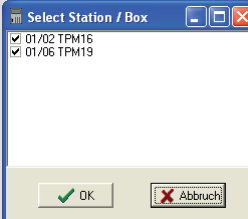


The dialog box titled "Select Station / Box" has a blue title bar with standard window controls. It contains a list box with two items: "01/02 TFM16" and "01/06 TFM19", both preceded by checked checkboxes. At the bottom are two buttons: "OK" with a green checkmark icon and "Abbruch" with a red X icon.

 - For devices not to be updated remove the hook and start the update procedure by button "OK".

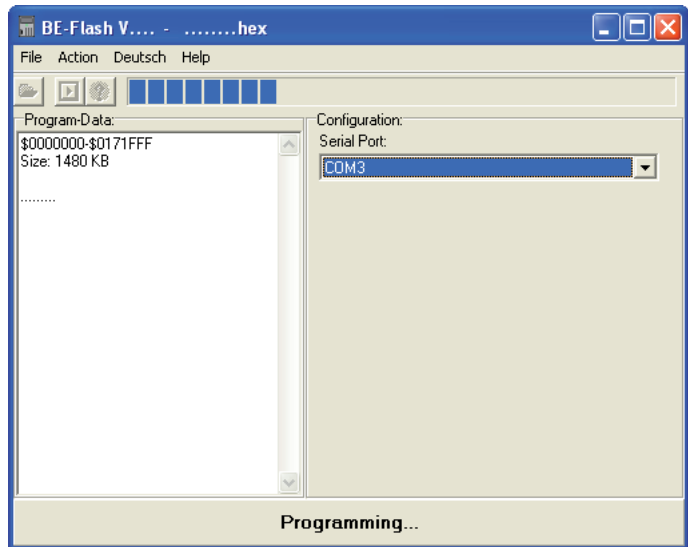

 —> A bargraph informs about the progress of the programming procedure.

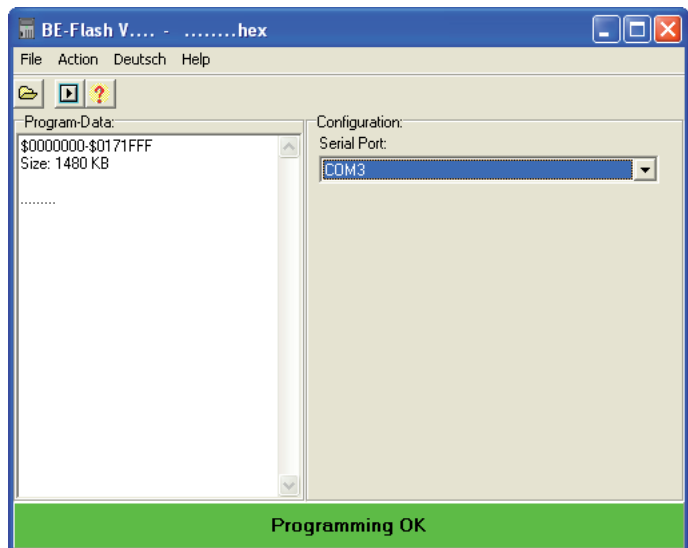

- > After a successful programming "Programming OK" is displayed.
- > If problems occur switch off the power saving function and the screen saver as these functions partly may be disturb the communication via the serial interface.

- > The update via Ethernet needs significantly more time than the update via RS-232 direct connection.
First the new firmware will be transmitted to the head-end station (bargraph).
After a successful transmission the selected cassettes will be updated ("Serial service" is displayed at the control unit). This can take up to 45 minutes for each cassette.
During this time

no reaction

is displayed in the BEFlash window. Ignore this message and end BE-Flash.

Possible error messages during an update via the COM interface:

Com Error

- > You have selected the wrong COM interface.

no reaction

- > The selected firmware does not correspond to the cassette.

Possible error messages during an update via Ethernet:

not found

- > There is no cassette available which corresponds to the selected firmware.

